# Panasonic

### **Proprietary Telephones**

# Quick Reference Guide KX-T7720/KX-T7730 Model KX-T7735/KX-T7750

## Important Information

### When you ship the product:

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a postage-paid letter, detailing the symptom to the outside of the carton. DO NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.

#### **Product service:**

Panasonic Servicenters for this product are listed in the servicenter directory. Consult your authorized Panasonic dealer for detailed instructions.

#### WARNING:

TO PREVENT THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

THIS HANDSET EARPIECE IS MAGNETISED, AND MAY RETAIN SMALL FERROUS OBJECTS.

### **IMPORTANT NOTICE:**

Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for use in an emergency.

#### Note:

In this manual, the suffix of each model number is omitted.

### Included Accessories: for extra orders, call toll free 1-800-332-5368

- Handset ..... 1
- Handset Cord . . . . . . 1
- Telephone Line Cord ..... 1
- Stand . . . . . . . . . . . . . . . . . 1

For your future reference	
SERIAL NO.	DATE OF PURCHASE
(found on the bottom of the unit)	
NAME OF DEALER	
DEALER S ADDRESS	
DEALER S TEL. NO.	

Please read this manual before using and save for future reference.













\* Consult your dealer for more details on the operations above.

#### ¢\_\_\_\_ LCD (Liquid Crystal Display) Ð Panasonic KX-T773 16 6 0 ADVANCED PROCRAM MES AG 2 (J) 6 NTERCOM CCNF FWD/DND PAUSE $(\mathbb{I})$ ഗ് G ⊕ А AUTO ANS AUTO DIAL REDIAL FLASH/RECALL 6 MITE B 6 АВС 2 (7 JKL МN GHI 4 5 6 8 PQRS τυν WXYZ OPER Ħ TRANSFER HOLD 6 0 1 Ð Ð Headset Jack Microphone

#### **RINGER Volume Selector**

\* The display and LCD Back-lit are only available on the KX-T7730/7735.

- \* Headset (not included): Recommended KX-TCA87/88/90
- \* The KX-T7750 does not have a microphone.

**PROGRAM:** Used to enter and exit the programming mode.





```
FWD/DND (Call Forwarding/Do Not
Disturb): Used to perform Call Forwarding
or Do Not Disturb.
```

**FLASH/RECALL:** Used for External Feature Access or to disconnect the current call, and make another call without hanging up.

6 AUTO ANS (Auto Answer) (KX-T7720/7730/7735): Used to receive an incoming call in the hands-free mode.

**MUTE (KX-T7720/7730/7735):** Used to mute the microphone during a conversation.

**VOICE CALL (KX-T7750):** Used to receive a notification via monitor in place of ringing.

# Location of Controls



AUTO DIAL/STORE: Used for speed dialing or storing program changes.



**REDIAL:** Used to redial.



HOLD: Used to place a call on hold.



**SP-PHONE (KX-T7720/7730/7735):** Used for the handsfree operation.

> MONITOR (KX-T7750): Used for handsfree dialing. You can monitor the other party's voice handsfree.

12 NAVIGATOR KEY (KX-T7730/7735): Used to adjust the volume and the display contrast, or select desired items for each function.

> VOLUME KEY (KX-T7720/7750): Used to adjust the volume.

Programmable Function Button: Used as a one-touch dial button (Button assignment is required).

# Initial Settings

- Flexible Outside (CO) Line Button: Used to make or receive an outside call. Pressing this button seizes an idle outside line automatically. (Button assignment is required.) Also used as function buttons. (Button assignment is required.)
- PAUSE: Used to insert a pause during dialing.
- 16 **MESSAGE:** Used to leave a message waiting indication, or call back the party who left the message waiting indication.
- Ð
- Message/Ringer Lamp: The Message/ Ringer lamp informs you visually that you have a message or a call.
  - When you receive a call, the lamp flashes depending on the ringing pattern. When the ringing pattern is set to Single (Slow flash), Double (Moderate flash), or Triple (Rapid flash) in your PBX, the lamp flashes. When the other ringing patterns are set in your PBX, the lamp may not flash. (e.g., S-Double, Call Waiting Tone1).
  - · When someone has left you a message, the lamp is lit continuously.



\* The above settings may return to default settings if the telephone line cord is disconnected, or the main unit's power is interrupted.



# Wall Mounting

1 Pull down the handset hook until it locks, so the tab holds the handset.



3 Mount the unit on the wall.



\* KX-T7735 model illustrated on this page.

2 Remove the attached stand.



To temporarily place the handset down during a conversation, hook it over the top edge of the phone as shown.



# Important Safety Instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

- 1. Read and understand all instructions.
- 2. Follow all warnings and instructions marked on this unit.
- 3. Unplug this unit from the main unit before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
- 5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
- 6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
- 7. Do not allow anything to rest on the extension cord. Do not locate this unit where the cord will be abused by persons walking on it.
- 8. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
- 9. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
- 10. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized servicenter when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.

- Unplug this unit from the main unit, and refer servicing to an authorized servicenter when the following conditions occur:
  - A. When the extension cord is damaged or frayed.
  - B. If liquid has been spilled into the unit.
  - C. If the unit has been exposed to rain or water.
  - D. If the unit does not work normally by following the manual. Adjust only controls covered by the manual. Improper adjustment may require extensive work by an authorized servicenter.
  - E. If the unit has been dropped, or physically damaged.
  - F. If the unit exhibits a distinct change in performance.
- During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
- 13. Do not use this unit to report a gas leak, when in the vicinity of the leak.

## SAVE THESE INSTRUCTIONS

# FCC and Other Information

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** To assure continued compliance with FCC rules, do not make any unauthorized modifications. When programming emergency numbers and/or making test calls to emergency numbers:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
- Perform such activities in the off peak hours, such as early morning hours or late evenings.
- If there is any problem, unplug the extension and connect a known working phone. If the known working phone operates properly, have the defective phone repaired by your maintainer. If the known working phone does not operate properly, check the PBX System and the internal extension wiring.
- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps and motors.
- The unit should be kept free of dust, moisture and vibration, and should not be exposed to direct sunlight.
- Do not use benzine, thinner, or any abrasive powder to clean the cabinet. Wipe it with a soft cloth.
- Do not disassemble this unit. Dangerous electrical shock could result. The unit must only be disassembled and repaired by qualified service technicians.
- When a failure occurs which exposes any internal parts, disconnect the telephone line and mains supply immediately and return the unit to your maintainer.

#### This telephone provides magnetic coupling for hearing aids.

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America One Panasonic Way, Secaucus, New Jersey 07094

#### Panasonic Sales Company ("PSC"), Division of Matsushita Electric of Puerto Rico, Inc.

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985

© 2002 Kyushu Matsushita Electric Co., Ltd. All Rights Reserved.

Printed in the United Kingdom

www.panasonic.com

PSQW1921ZA KU0902YS0